




# 1AC II Volt Alert LVD1/LVD2 Volt Lights SM100/200/300 SocketMaster Testers

FLUKE®

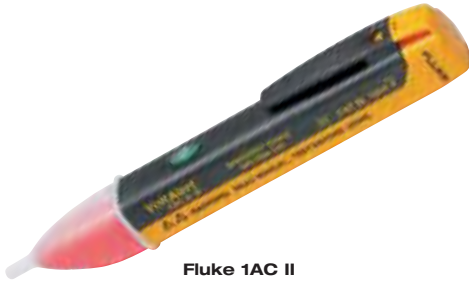

Fluke 1AC II

## Fluke 1AC II VoltAlert™

The Fluke VoltAlert AC voltage detector is very easy to use – just touch the tip to a terminal strip, outlet or cord. When the tip glows red and the unit beeps, you know there is voltage on the line.

- It continually tests its battery and its circuit integrity with a periodic double flash visual indication.
- Highest safety rating: CAT IV 1000V
- Detects voltage without metallic contact

**Operating range:** 200 – 1000V AC  
**Batteries:** Two AAA Alkaline  
**Size (H):** 148 mm  
**Two Year Warranty**

### Fluke 1AC II VoltAlert™ 5-pack

- Buy 4 get 1 FREE



LVD1

## LVD1 Volt Light

Dual sensitivity voltage detector

- Detects voltage from 40V to 300V AC
- Blue light means you're close
- Red light means you're at the source
- Comes with a versatile clip to secure light to pocket, hat or even panel door



LVD2

## LVD2 Volt Light

Combines bright light and voltage detection in one pen style design

- Dual sensitivity
- Detects voltage from 90V to 600V AC
- Blue light means you're close
- Red light means you're at the source
- Rated to CAT IV 600V

## SM100/200/300 SocketMaster Testers

The fast way to check if your sockets are safe.



SM100



SM200



SM300

Only available with UK plug

### Features

	SM100	SM200	SM300
Clear indication of wiring status	•	•	•
Audible notification of wiring status		•	•
Unique soft-touch RCD test checks 30 mA RCD's for trip within 300 ms			•
Earth Volts Touchpad detects raised earth voltages >50 V,			•

### Ordering Information

Fluke 1AC II	VoltAlert
Fluke 1AC II 5PK	VoltAlert (5-pack)
LVD1	Volt Light
LVD2	Volt Light
SM100	SocketMaster Tester
SM200	SocketMaster Tester
SM300	SocketMaster Tester



Supplied By: Tel: (011) 683 4365

[www.instrumentsgroup.co.za](http://www.instrumentsgroup.co.za)

Test and Measurement Instruments C.C.